

# HVM-36DH



## Main Features

- Live-time, recording and playback functions available
- Image setup under group mode
- Playback DVR recording data by time and event search
- Support DVR system setup
- E-Map
- RemoteAP
- RemoteLite
- WebServer
- Dual-Monitor

## Specifications

Resolution	
<b>Supported Resolution</b>	1024* 768 above
Live	
<b>Security</b>	Login Username and Password
<b>Monitoring Mode</b>	1, 4, 9, 16, 36
<b>Display Mode</b>	Group
<b>View Rotation</b>	Yes
<b>Audio Out</b>	Yes
<b>Digital Zoom Control</b>	Yes
<b>PTZ Control</b>	Yes
<b>Snapshot</b>	Yes
<b>I Frame Only</b>	Yes
<b>View Title</b>	Yes
Playback	
<b>Monitoring Mode</b>	1, 4, 9, 16, 36
<b>Display Mode</b>	DVR Playback
<b>Audio Out</b>	Yes
<b>Digital Zoom Control</b>	Yes
<b>Snapshot</b>	Yes
<b>Playback Mode</b>	4 Modes Mode1: DVR Search Mode2: Download File Mode3: Emergency Record Mode4: Synchronization Record
Record	
<b>Download DVR Recorded Data</b>	Yes
<b>Live Emergency Record</b>	Yes
<b>Time-Point Backup</b>	Schedule

Event	
<b>DVR Event Log</b>	Record & Playback
<b>CMS Event Log</b>	Yes
System Setup	
<b>Security</b>	2 levels
<b>Group Setup</b>	Yes
<b>Time-Point Schedule Setup</b>	Yes
<b>User Setup</b>	Two Groups. "admin" and "guest"
<b>Multi-Language</b>	Yes
<b>Version Information</b>	Yes
<b>View Rotation</b>	Yes, 3~10 sec.
<b>Buzzer</b>	Yes, wav file
e-MAP	
<b>Security Setting</b>	Yes, user and group
<b>e-Map Setup</b>	Tree Mode Setup, Pull and Drag the Device
Remote AP	
<b>Monitoring Mode</b>	1, 4, 9, 16, 36
<b>Playback</b>	DVR Playback
<b>CMS Setup</b>	Group Setup, DVR connecting Setup, Recording Setup
Remote Lite	
<b>Monitoring Mode</b>	1, 4, 9, 16
Web Server	
<b>Monitoring Mode</b>	1, 4, 9, 16, 36
Dual Monitor	
<b>Monitor Setup</b>	Live, Multi-Live, Playback and e-Map
<b>Monitoring Mode</b>	1, 4, 9, 16, 36

SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE